


CLASSEQ

30013364



P500 Standard + WS Wiring Diagram

P500 P500-A P500-A-WS

1 Phase + Neutral (30A per Phase)
6 kW Rinse Element

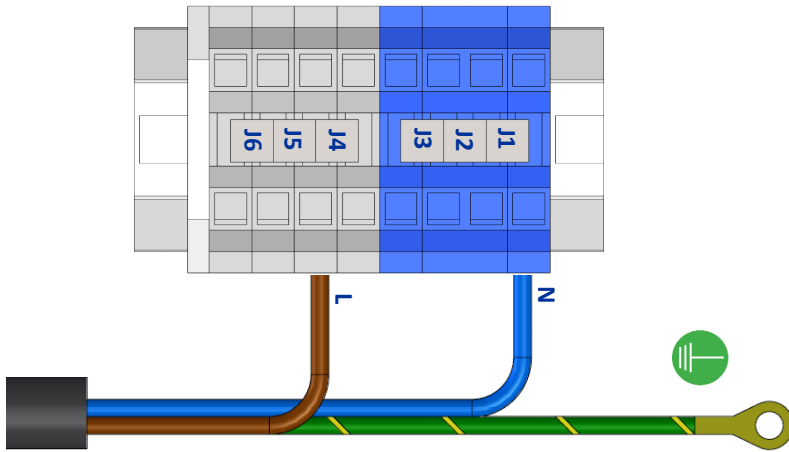


3 Phase + Neutral (Up to 16A per Phase)
6 kW Rinse Element

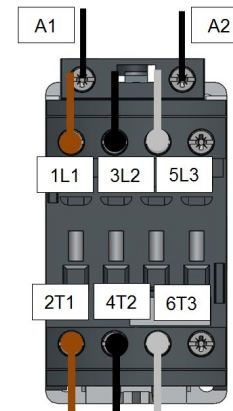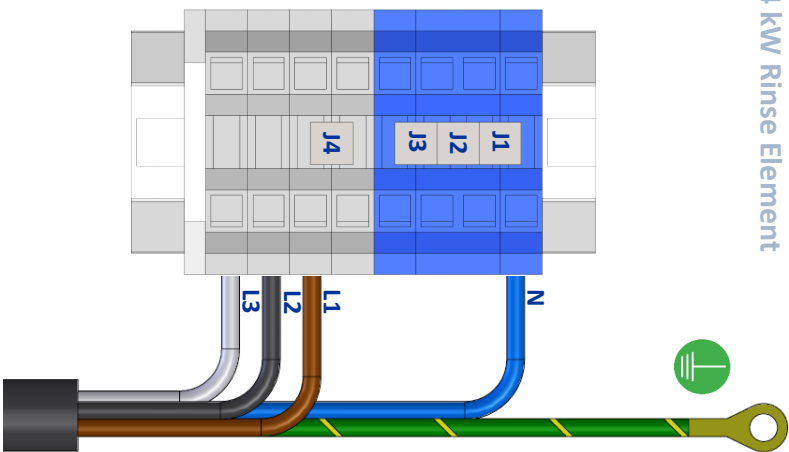

WASH CONTACTOR

COIL	A1 & A2 (Black) – From Control unit Output No 6
INPUT	1L1 (Brown), 3L2 (Black) & 5L3 (Grey) – From Terminal Block
OUTPUT	2T1 (Brown), 4T2 (Black) & 6T3 (Grey) – To WASH ELEMENT

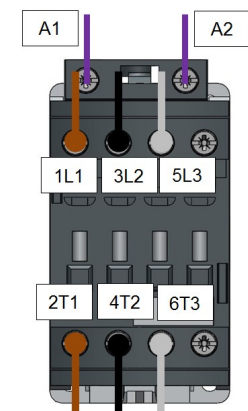

RINSE CONTACTOR

COIL	A1 & A2 (Black) – From Control unit Output No 7
INPUT	1L1 (Brown), 3L2 (Black) & 5L3 (Grey) – From Terminal Block
OUTPUT	2T1 (Brown), 4T2 (Black) & 6T3 (Grey) – To RINSE ELEMENT